


ADJUST/CALIBRATE AIR FLOW

Counter-clockwise to vent more air causes weaker shot.
Clock-wise to increase air flow to strengthen shot.

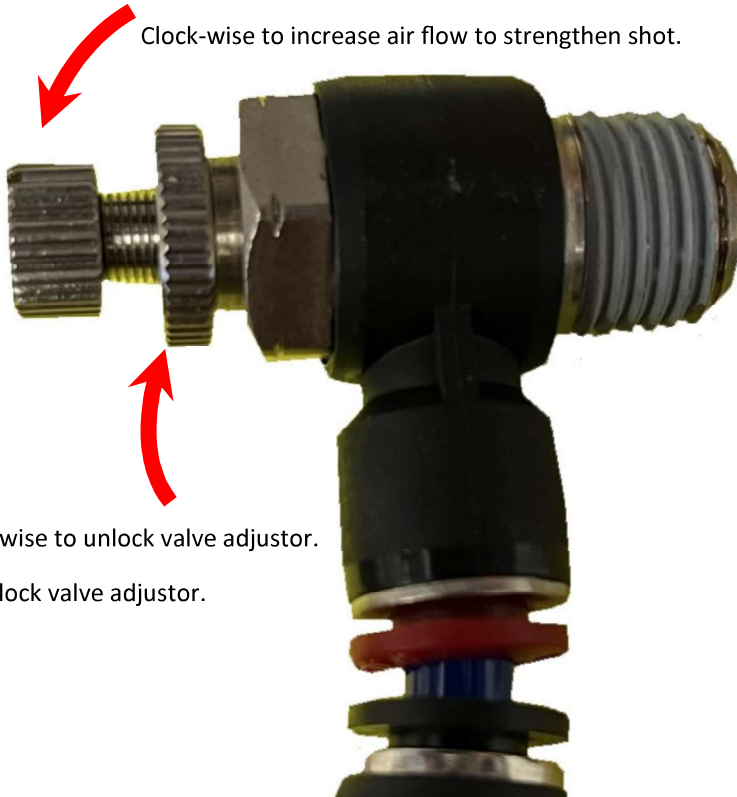

Counter-clockwise to unlock valve adjustor.
Clock-wise to lock valve adjustor.

With the plunger installed, adjust Needle Valve counter-clockwise all the way.

Then, adjust the knob clockwise until a “full-pull” on the Red Plunger Knob propels the puck between the first line and home position. It must not bounce off home again nor land on the line or before it. TEST MORE THAN ONCE!!

Note: Closing this valve too much may increase the likelihood of the puck being bumped from the start position from tampering with the Red Plunger Knob.

