

# Error 11 : Indicates that the back door is open.

**Solution:** Check the door and door switch.

If this push switch is in, 12 volts should be present at connector J4, pin 2 on the I/O board. It is the orange/white wire.

Measure between pins 2 and 6 (black wire) on the connector.

If you measure 0 volts, the push switch is not engaged, broken, or bad wiring.

