

Super Chexx Pro boo button test


using the allen wrench provided with the game remove the 4 bolts that attach the base to the top




slide the table top to the side and balance the top on something of similar size as the base (be careful not to damage the wires coming out of the bottom of the top) so you can access the main board



Straighten out a metal paper clip (or a use a small piece of wire) and start a game. With the game playing use the paper clip to touch the two pins indicated by the red arrows. If the main board is operating the solenoid will fire and if the game is not playing another audio file at that time it will make a boo noise (or negative comment)

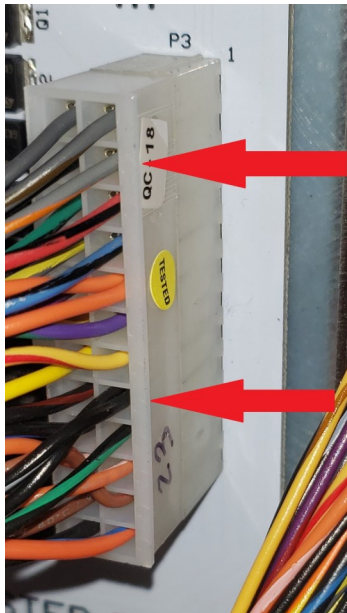

Home boo button

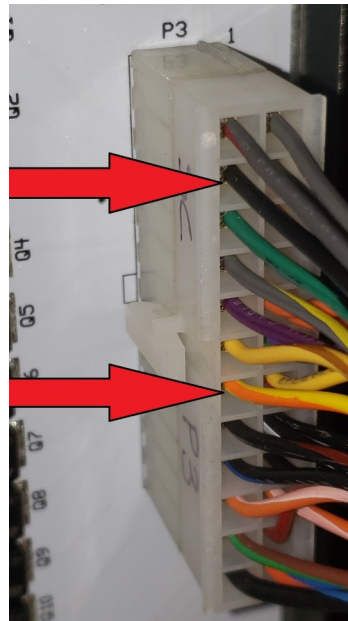

visitor boo button