



On each display there is a micro SD card connector. Push the card in lightly until it clicks and let go. The card should pop out slightly. With your nail pull it out. Insert the new card the same way the old card was. Push until it clicks. The card will remain in the connector.

Do the same on the main board. All three cards have the same files on them.

