Upon power up the game displays the software version of the boards installed.

The time display upon first powerup displays a sequence of numbers, first the revision of software, next the station I.D., and lastly 0

The high score display shows the revision of software then the saved high score value

The main cpu board has a small sticker applied to the top of the board listing the version, later versions of software you can enter the programming menu and scroll to the last option which will display the version flashed to the board on the high score display.



NS2234X with E2034XX



NS2234X with E02234X

