
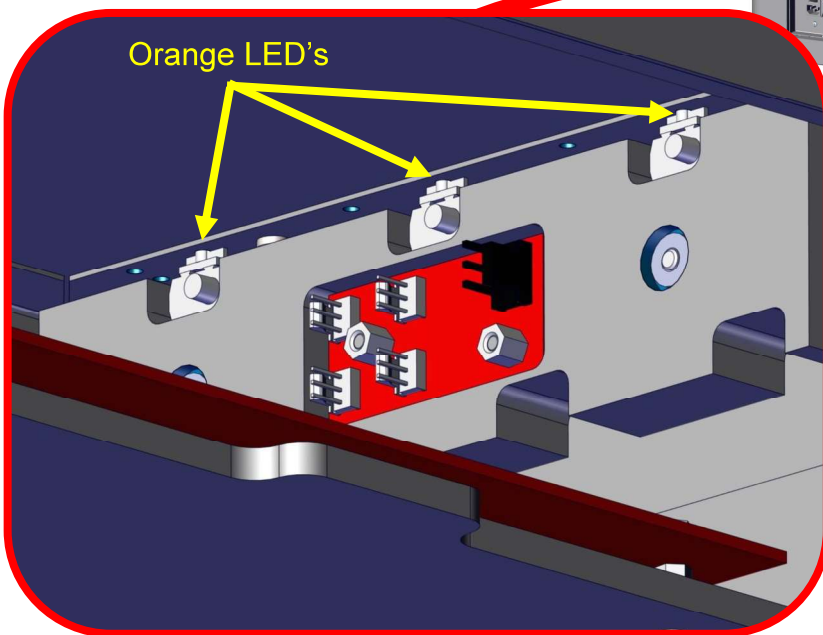


Resolving Error 7

There are three 90 degree reflective sensors that project a beam across the prize shoot. When the beam is reflected back to the sensor it will indicate this with an orange LED. If the LED is on constant, the sensor is working correctly and nothing is blocking the beam. If the LED is flashing, this means the sensor is most likely dirty or the reflective decal is dirty. It could also not be aligned. If the LED is off, then the beam is not being seen.

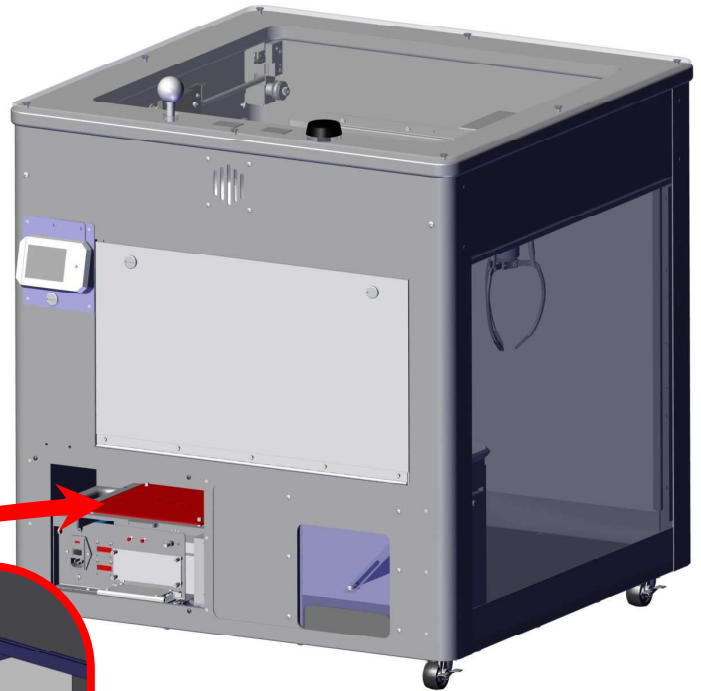

Removing the Sensor Assembly

To remove the sensor assembly, from within the prize chute, remove the two 1/4-20 Allen bolts. The sensor assembly will come out of the electronic door.

