
1) With the game powered on unplug the USB connection from the raspberry Pi.

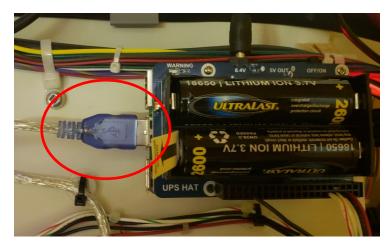

2) the game screen will display "No 232 Adapter"



3) plug a USB keyboard into the raspberry PI and press the "t" key on the keyboard. The display on the game will change to the antenna adjustment screen.



4) using the up and down arrows adjust the value for the antenna adjustment, the range is between -3.25 to 5.25. Once the desired value has been set press "t" on the keyboard to save and exit, unplug the USB keyboard and reconnect the USB connection to the main board.