

Important;


Balls must be replaced in sets of two, old balls must be discarded. ONLY 2 balls per game.

Calibration is now required!

The game has two different calibrations which both need to be performed if any work has been performed on the slingshot assembly or if the software was reloaded or updated. Failure to do so will cause poor game play and overall a terrible experience for the player. The slingshot will not function correctly.

The two different calibrations are the “Spot Light” and “Slingshot”. The spot light calibration keeps the game play centered while the slingshot calibration aligns the minimum and maximum heights the game can use.

To perform the “**Spot Light Calibration**”, from the main menu select “Calibration Spotlight” [1]. Shoot balls 3 times at the top, bottom, left and right of the screen per instructions [2]. Once finished, test the spot light function [3]. The balls should shoot where the spot light is shown.

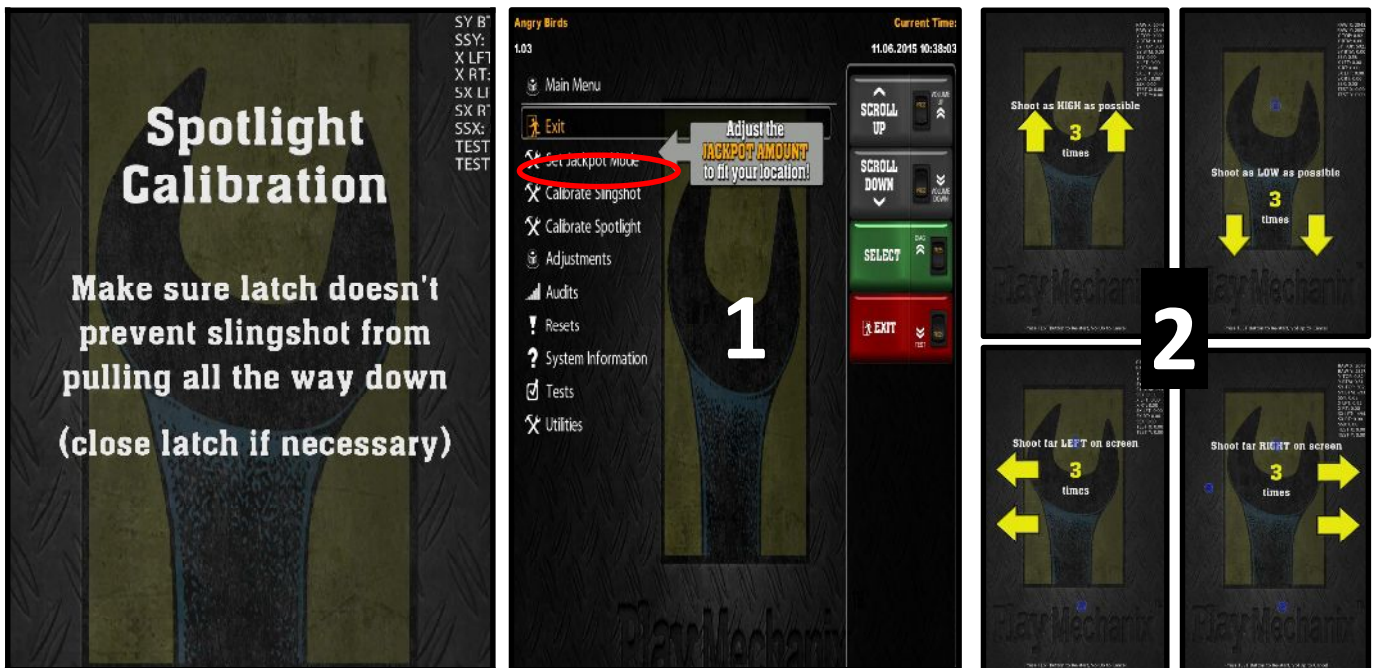

To perform the “**Slingshot Calibration**”, from the main menu select “**Calibration Slingshot**” [1]. Move the sling shot assembly to the upper left corner and press “**DIAG**” button [2]. Now aim the sling shot assembly to the lower corner of the screen and press “**DIAG**” button [3].

Again, make sure the latch for the lock prevent the slingshot from pulling all the way down.

