
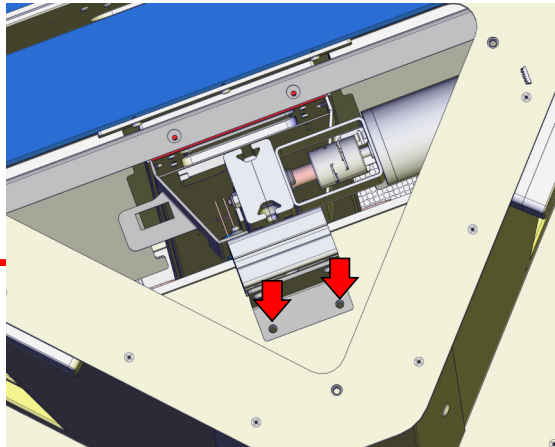




How To Remove the slider assembly (SD1050X)

Remove the front Glass from the game.
It is held on with 10 screws, 5 at each side.

Remove the Top and bottom panels from the game.

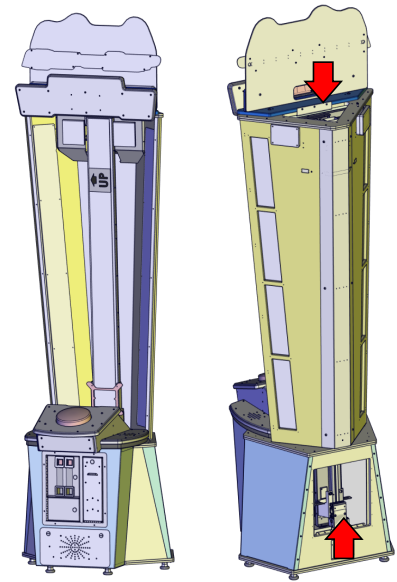

Remove the two bolts that hold the top bracket to the SD1050X.

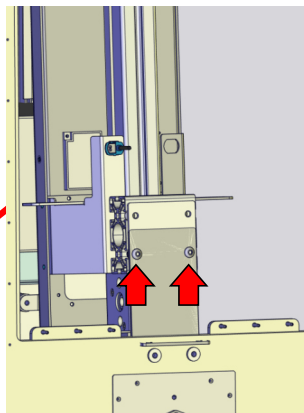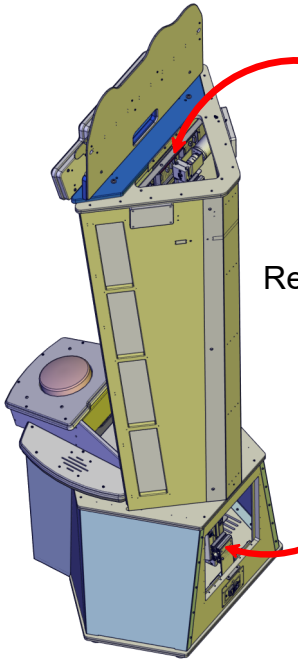

At the bottom, unplug the bottom limit sensor, 12 pin SD2085LX connector, and the four power plugs. At the top, unplug the network cables and J7 (SD2068LX connector).

Then tilt the assembly forward and out of the cabinet.

