


Whack N win—Hit pad replacement instructions



Step 1– Replace the hit pad assembly

Open the bottom drawer and from underneath the barrel's top remove the three bolts labeled as A,B, and C (1). Unplug the harness and lift the assembly out. When replacing, use the upper hole to feed the wire harness through.

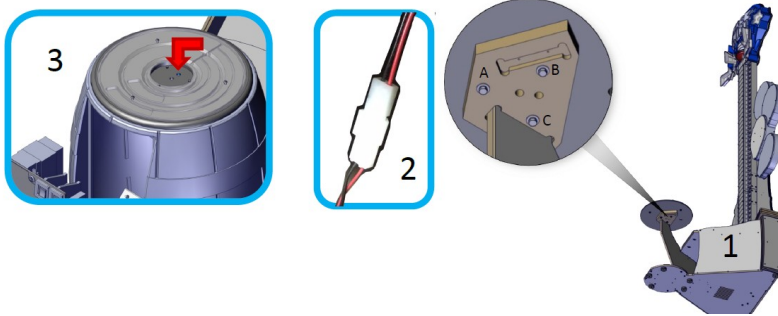

Step 2– install the new brain board

With the game powered off open the access door in the rear back on the game, remove the 3 white nylons nuts (circled in yellow) holding the red brain board in place, grasp the board by the edges and pull up and replace the red board with the blue board.

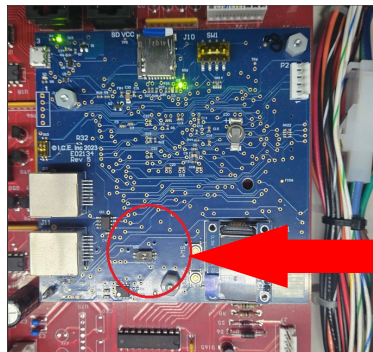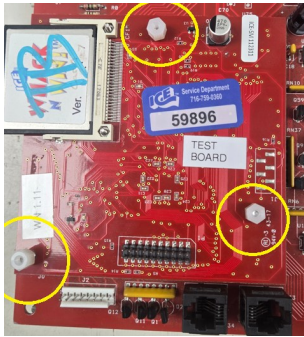

*****on the blue brain board
SW5 switch 1 must be on and
2 must be off**


Step 3 -calibrate the game

How to Calibrate the hit pad

1. Enter programming.
2. Change Option 16 to 1.
3. Press program.
4. One of the displays should display CAL.
5. Hit the hit pad as hard as you can.
6. Wait for reboot.

How to confirm Calibrate of the hit pad

1. Start Game.
2. Hit the pad as hard as you can.
3. Should land between the same two values.
4. If below or above, re-calibrate.

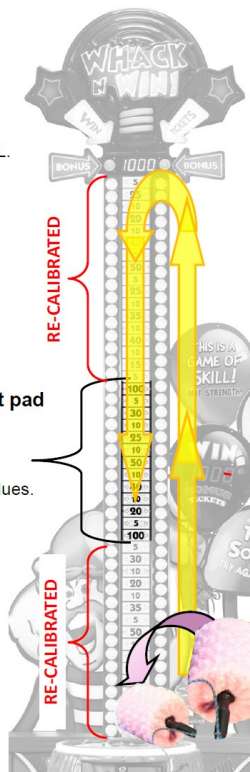

*****When calibrating if the values received from the hit pad are not within tolerances for the board the entire tower will turn red to indicate there is a problem with the data recieved from the sensor**